


# INSTRUCTIONS

## MAXIM 3000® SHELF INSTALLATION

### INTRODUCTION

Satellite portable restrooms and accessories must be assembled according to approved assembly procedures. Variations in assembly could adversely affect product life and warranty.

### HARDWARE:

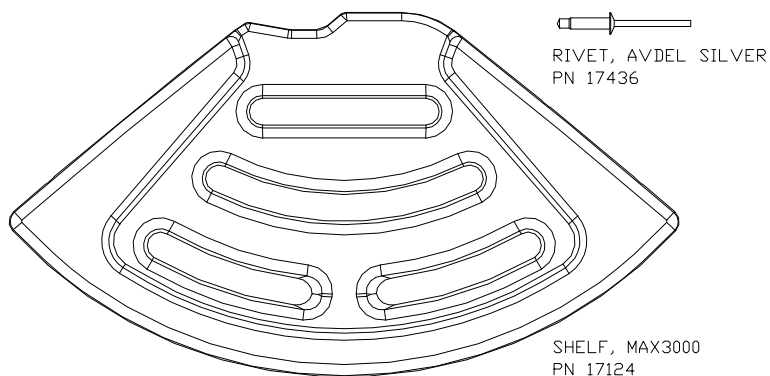

### TOOL:

- DRILL ELEC/CORDLESS,
- #10 (0.194") DRILL BIT,
- RIVET GUN

Drill out the (4) dimples, located 16" from the roof on the right rear corner.

Rivet shelf to panels with an expanding rivet as shown.



**NOTE: IF NO DIMPLES IN PANELS, USE SHELF AS A DRILLING TEMPLATE.**

**(BE CAREFUL TO ONLY DRILL THROUGH FIRST LAYER OF DOUBLE WALLED PANEL)**



SATELLITE INDUSTRIES, INC.

2530 Xenium Lane North, Minneapolis, MN 55441  
Telephone: 763-553-1900 Fax: 763-553-1905  
800-328-3332 / [www.satelliteindustries.com](http://www.satelliteindustries.com)